

ITEMS REQUIRED



PROPANE HOSE



PROPANE TANK

HOW TO OPERATE PROPANE BURNER

1. Connect the propane tank to the burner, see reverse for Propane Use & Safety.
2. Make sure all control knobs are in the CLOSED position.
3. Turn the propane tank's valve completely open.
4. Hold a lit butane gun next to burner, turn burner knob to OPEN and the burner will ignite instantly.
5. Adjust control knobs to desired temperature.

TROUBLESHOOTING

PROBLEM	QUICK FIX
<i>Burner won't ignite</i>	<ul style="list-style-type: none"> • Check to make sure propane tank is full. • Turn burner knob to OPEN and wait for few seconds to light with butane gun. If it will not ignite instantly, CLOSE control knobs and repeat a few times.
<i>Low flame/temperature</i>	<ul style="list-style-type: none"> • Check to make sure propane tank is full. • Turn off the gas at the propane tank and disconnect the propane hose. Turn all control valves on high for 1 minute and then turn off. Reconnect the propane tank and hose. Slowly turn on the gas and light burner normally.
<i>Uneven heating/Hot spots</i>	<ul style="list-style-type: none"> • The burners may be clogged from drippings. Use a wire brush to remove particles from burners. Do not use oven cleaner to harsh detergents on the burners.

PROPANE USE & SAFETY

CONNECTING TANK

- Remove the main tank's valve plug. Thread the POL connector snugly into the main tank by turning the tank valve counter-clockwise.
- Always position the propane tank so that the connecting hose is not bent.

GENERAL USE & DISCONNECTING

- Use soapy water to test all fittings and connections for leaks before operating the appliance.
- Never use propane tanks indoors.
- If using appliances in a tent, the propane tank must be to the exterior of the tent. Use a non-combustible strap or chain on a weatherproof base. Only 1 spare 20lb. tank is allowed per tent.
- Propane tanks are designed to be used with the valve completely open. Never leave the valve partially open or closed.
- When not in use, turn off all temperature controls and completely close the main valve on the propane tank.

STORAGE & TRANSPORTING

- All propane tanks must be secured in an upright position.
- To prevent the propane tank from being overturned, place in a box or crate.
- Never store propane tanks in a building or a hot vehicle. Heat may cause the relief valve to discharge propane and create a dangerous situation.

BEFORE RETURNING

- A \$37.50 cleaning charge will apply to each propane burner if they are not returned in the same condition they were received.
- To avoid cleaning charges, scrape surface free of food and charred particles. Wipe all surfaces with hot, soapy water.
- Store burner in a dry area when not in use. The burner is made of cast iron and will rust if proper precautions are not taken.

BBQ CLEANING CHECKLIST

- All drip trays are emptied.
- Surfaces have been scraped and are free of food & charred particles.
- Interior and exterior have been wiped with hot soapy water

<p>OFFICE USE ONLY</p> <p><input type="checkbox"/> All Grates <input type="checkbox"/> Hose <input type="checkbox"/> All Grease Pans</p> <p><input type="checkbox"/> Lava Rocks or Flavor Trays <input type="checkbox"/> Burner</p> <p>Cleaned / Tested by: _____ Date: _____</p>
